


Hand Swaged DIY Kit - Jaw/Jaw Rigging Screw & Lag screws

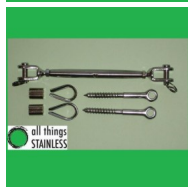

Hand Swaged DIY Kit for Balustrading using lag screws.

Kit Includes

2 x 6mm Lag Screws

1 x 5mm Jaw/Jaw Rigging Screw

2 x 3mm Thimble

2 x 3mm Ferrule (swage)

Use 7x7 3.2mm Stainless Steel wire with this kit

Rating: Not Rated Yet

Price

\$ 11.00

\$ 1.00

[Ask a question about this product](#)

Description

Hand Swaged DIY Kit - Jaw/Jaw Rigging Screw & Lag screws

This is a great DIY kit that can be used with timber posts. The lag screw, in conjunction with the jaw/jaw rigging screw, gives you a nice streamline finish. It is easy to install with the only tools required being a drill, a 3mm and 4mm drill piece, a small shifter and a hand swaging tool. Wire cutters could also be handy but a sharp pair of pliers or tin snips will do.

Kit Includes:

2 x 6mm Lag Screws

1 x Jaw/Jaw Rigging Screw

2 x 3mm Thimble and Ferrule (swage)

At one end you will use:

- 1 x Lag Screw
- 1 x Thimble and Ferrule

At the other end:

- 1 x Lag Screw
- 1 x Thimble and Ferrule
- 1 x Jaw/Jaw Rigging Screw (to tension the wire)

Use 7x7 3.2mm Stainless Steel wire with this kit

If you are not sure how many wires/kits you require see our [Balustrade Regulations](#) page for more information.

// //