


Pre-Swaged - DIY Kit with Saddles

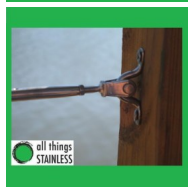

Pre swaged DIY Kit for Balustrading

Kit Includes

2 x 5mm Saddles

4 x Saddle Screws

1 x 3mm Jaw/Swage Rigging Screw

1 x 3mm Fork Terminal Swage

Hydraulic Swaging of the fittings to the wire

Rating: Not Rated Yet

Price

\$ 18.15

\$ 1.65

[Ask a question about this product](#)

Description

These kits are so easy to use.

We have sold 1000's of these kits and our feedback highlights our track record for 100% accuracy and efficiency.

Kit Includes:

2 x 5mm Saddles

4 x Stainless Screws or Pop-Rivets (you tell us which you need)

1 x 3mm Jaw/Swage Rigging Screw

1 x 3mm Fork Terminal Swage

Hydraulic Swaging of the fittings to the wire

At one end you will use:

1 x Saddle
2 x Stainless Screws
1 x Jaw/Swage Rigging Screw (to tension the wire)

At the other end:

1 x 5mm Saddle
2 x Stainless Screws
1 x Fork Terminal Swage

The rigging screw can be pulled apart to feed them through any centre posts. You will need to drill 8mm holes through the center posts.

The price includes the cutting and swaging to the wire. Upon purchasing this item you will need to provide the lengths and quantities of the runs. The lengths will need to be the inside to inside of the end posts. It is important that these measurements are accurate and that you do not move your posts once your order has been placed.

We will do the rest. We will cut the wire to length and hydraulically swage the fittings to the wire.

You will also need to purchase the wire to go with these kits. To calculate the wire required multiply the quantity required by the length of the wire. Eg:

11 x 1554 = 17094

11 x 2459 = 27049

11 x 5654 = 62194

Total wire = 106 meters

You will also need to type the lengths and quantities required into the comments section during the checkout process

// //